 


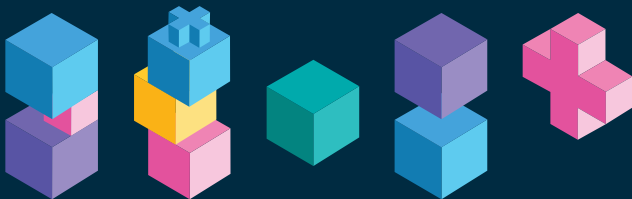

ZERO 3108

User Manual



Zero 3108




非背光

型號：DKZE1808

- 結構：機械式結構
- 軸：Cherry MX 機械軸
- 鍵帽材質：PBT 或 ABS
- 印字技術：二色成形 或 雷射雕刻 或 油墨印刷
- 尺寸：440 x 140 x 41 mm
- 重量：1200g
- 產地：中國

確切規格每個地區可能會有不同，詳細請詢問各地代理商。

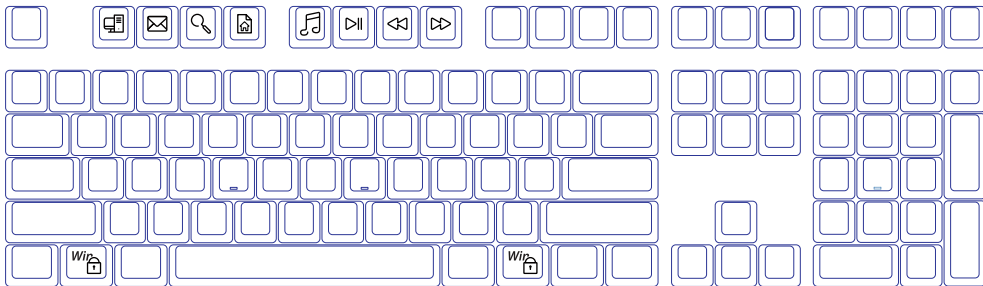

Zero 3108




單色LED燈

型號：DKZE1808S

- 結構：機械式結構
- 軸：Cherry MX 機械軸
- LED：單色LED燈
- 鍵帽材質：PBT 或 ABS
- 印字技術：二色成形 或 雷射雕刻 或 油墨印刷
- 尺寸：440 x 140 x 41 mm
- 重量：1200g
- 產地：中國

確切規格每個地區可能會有不同，詳細請詢問各地代理商。

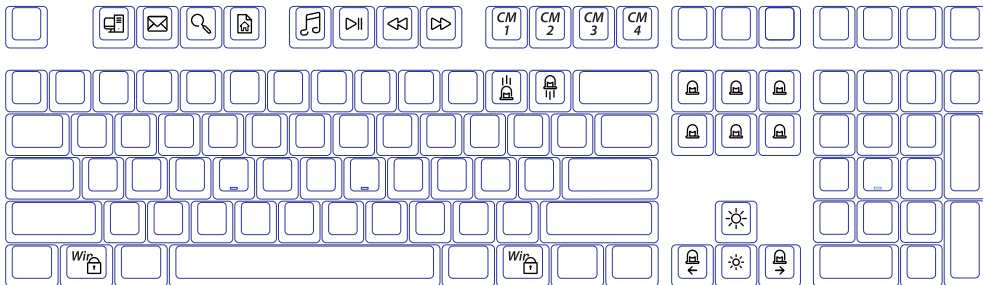

Ducky Zero 3108 多媒體功能鍵



	組合按鍵		功能
Fn+	F1	=	我的電腦
	F2		郵件
	F3		搜尋
	F4		首頁
	F5		多媒體播放器
	F6		播放/暫停
	F7		上一首
	F8		下一首

Ducky Zero 3108 燈光模式功能鍵



	組合按鍵		燈光模式
Fn+	Insert	=	燈光效果1
	Delete		燈光效果2
	Home		燈光效果3
	End		燈光效果4
	Page Up		燈光效果5
	Page Down		燈光效果6

註：每一區燈光效果，分別包含幾種不同燈光模式。

Ducky Zero 3108 燈光模式調整鍵



	組合按鍵		功能
Fn+	↑	=	增加亮度
	↓		減少亮度/關閉背光
	←		燈光方向向左
	→		燈光方向向右
	-		減慢燈光速度
	=		加快燈光速度

註：如要關閉背光，請按Fn + ↓至關閉即可。

Ducky Zero 3108 自定義區域背光模式(單鍵背光)



	組合按鍵		功能
Fn+	F9/F10/F11/F12	=	開始/結束自定義區域背光(4組)

設定方式：

按下Fn+F9 (選擇第一組設定) → 再按一次Fn+F9後指示燈閃爍 (開始編輯) → 針對想要設定的按鍵按一下即可亮燈/再按一下即可關閉 → 設定記憶區域背光完成後 → Fn+F9 (結束編輯)

*同理，Fn+F10/F11/F12也按照此順序編輯

Ducky Zero 3108 USB N-Key / 6-Key Rollover 切換模式



N-Key Rollover	6-Key Rollover
任意全鍵無衝輸出	任意6鍵輸出(預設)
同時按下Fn+Alt+N達1秒	同時按下Fn+Alt+6達1秒

Ducky Zero 3108 系統功能鍵



功能	設定方式
恢復原廠設定	同時按下左Windows鍵+右Windows鍵3秒，指示燈同時閃爍3下

Ducky Zero 3108 Macro V1.0 功能



	組合按鍵		功能	設定方式
Fn+	左Windows鍵	=	Gaming模式	按住3秒、指示燈同時閃爍3下完成 (鎖住Windows鍵，並可輸出Macro功能)
	Esc		開始/結束錄製Macro	按一下即可

1. Macro功能無需軟體，根據說明操作即可直接使用。
2. Fn、Esc、左Windows鍵此3顆功能鍵無法自定義Macro。
3. Macro功能須要切換至Gaming模式(Fn+左Windows鍵)才能使用，若重新插拔鍵盤後，鍵盤會默認進入常規鍵位(出廠設定)，須重新切換至Gaming模式。
4. 目前Macro不支援自定義的間隔時間，即無法定義A、B之間的時間，不論錄製時輸入快或慢，都會以系統默認的觸發時間定義。

操作範例：將A鍵設定成數字123輸出

操作方式：Fn+左Windows鍵(進入Gaming模式) → Fn+Esc(開始錄製Macro) →

Fn+A (A鍵閃燈、開始對A編輯) → 輸入123 → Fn+A(結束對A的編輯) → Fn+Esc(結束錄製Macro)。



Zero 3108




Non-backlit

Model: DKZE1808

- Structure: Mechanical Structure
- Switch: Cherry MX Switch
- Keycap Material: PBT or ABS
- Made In China
- Printing Technology : Double-Shot or Laser Engraved or Print
- Dimensions: 440 x 140 x 41 mm
- Weight: 1200g

For more information on the specs and details of our keyboards, please contact our local distributors.

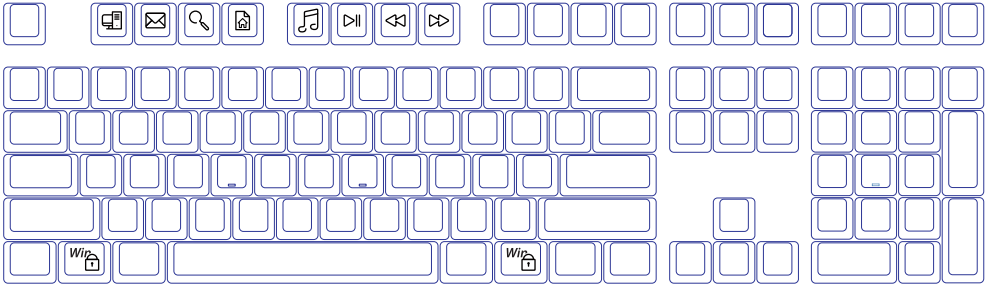

Zero 3108




Single color LED

Model: DKZE1808S

- Structure: Mechanical Structure
- Switch: Cherry MX Switch
- LED: Single Color LED
- Keycap Material: PBT or ABS
- Printing Technology : Double-Shot or Laser Engraved or Print
- Dimensions: 440 x 140 x 41 mm
- Weight: 1200g
- Made In China

For more information on the specs and details of our keyboards, please contact our local distributors.

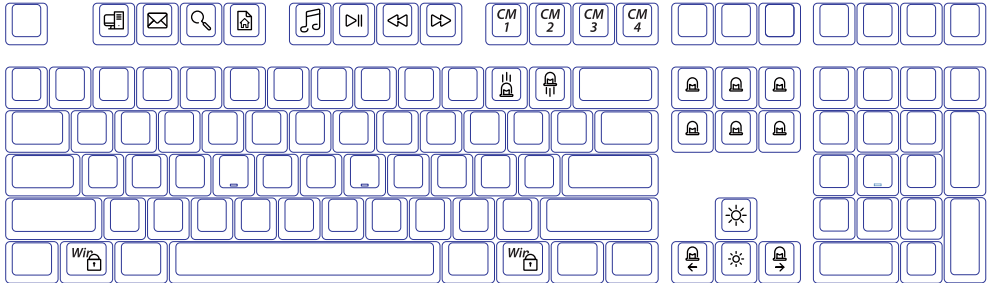

Ducky Zero 3108 Multimedia Function Keys



Combination Keys		Function	
Fn+	F1	=	My Computer
	F2		Mail
	F3		Search
	F4		Home Page
	F5		Multimedia Player
	F6		Play/Pause
	F7		Previous Track
	F8		Next Track

Ducky Zero 3108 LED Mode Function Keys



	Combination Keys		LED Mode
Fn+	Insert	=	LED Mode 1
	Delete		LED Mode 2
	Home		LED Mode 3
	End		LED Mode 4
	Page Up		LED Mode 5
	Page Down		LED Mode 6

Note: The LED mode in each key include several different lighting effects.

Ducky Zero 3108 LED Mode Adjustment Keys



Combination Keys		Function	
Fn+	↑	=	Increase Brightness
	↓		Decrease Brightness / Turn off the LED mode
	←		Lighting To The Left
	→		Lighting To The Right
	-		Decrease Speed
	=		Increase Speed

Note: To turn off the LED mode, Please press Fn+ ↓ until the lighting off.

Ducky Zero 3108 LED Zone Customization Modes



	Combination Keys		Function
Fn+	F9/F10/F11/F12	=	Start / Exit Customization Mode (4 profiles)

Setting Method:

Press Fn+F9 (Choose the first profile) → Fn+F9 (Start editing) → Press the keys you want to set / Press it again to turn it off → Finish editing → Fn+F9 (Exit editing)

* Similarly, Fn+F10 / F11 / F12 are also edited in this order.

Ducky Zero 3108 USB N-Key / 6-Key Rollover Mode



N-Key Rollover	6-Key Rollover (Default)
Press Fn+Alt+N for 1 second	Press Fn+Alt+6 for 1 second

Ducky Zero 3108 System Function Keys



Function	Setting Method
Reset to defaults	Hold Left Windows key+ Right Windows key for 3 seconds, the keyboard's indicator light will flash 3 times.

Ducky Zero 3108 Macro V1.0 Function



	Combination Keys		Function	Setting Method
Fn+	Left Windows Key	=	Gaming Mode	Hold for 3 seconds, the backlighting will flash 3 times (Lock the Windows key and input the Macro function)
	Esc		Start/End Recording Macro	Press it once

1. Macro doesn't need the software, according to the instructions can be used through hardware directly.
2. "Fn, Esc, Left Windows key" these three keys are unable to set Macro function.
3. Please press Fn+Left Windows key to the Gaming mode before setting the Macro. If you replug the keyboard, it will reset to the defaults, then you need to change it to the Gaming mode again.
4. Currently, Macro V1.0 doesn't support customizing the interval. Regardless of whether the input is fast or slow during recording, it is defined by the system's default trigger time.

Operating Example (Configure the key A to "1, 2, 3" output)

Steps:

Press Fn+Left Windows key to enter the Gaming mode → Press Fn+Esc to start recording Macro → Press Fn+A (A key will flash) and start to edit the A key → Enter 1, 2, 3 keys → Press Fn+A again to end the editing → Press Fn+Esc to end recording Macro





www.duckychannel.com.tw